
Model 800 Residential Steam Humidifier -

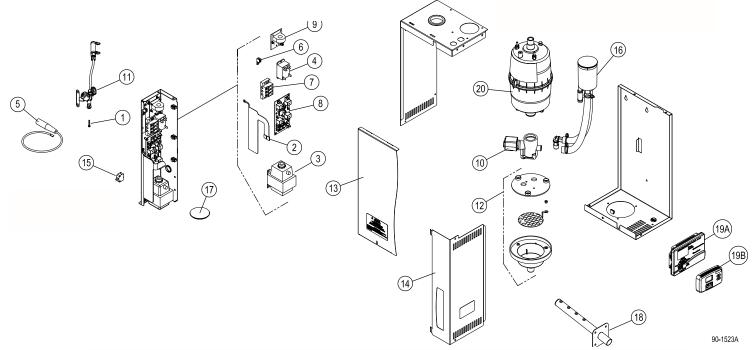

NO.	PART NAME	QTY/CTN	PART
1	Fill Valve In-line Strainer	12	4004
2	Membrane Switch	1	4975
3A	Transformer, 120/24 VAC for 11.5 amp unit* & fill valve contained within housing	1	4976
3B	Transformer, universal for units with fill valve inlet extending from bottom of housing	1	5306
4	Power Relay	1	4977
5	Electrode Wire	1	4978
6	Ground Lug	1	4979
7A	Input Power Terminal Block 3-post for 11.5 amp unit* and fill valve contained within housing	1	498
7B	Input Power Terminal Block 2-post for 11.5 amp unit* and fill valve inlet extending from bottom of housing	1	530
7C	Input Power Terminal Block 2-post for 11.5/16.0 amp unit*	1	5354
8	Internal Control Circuit Board	1	498
9	Current Sensing Circuit Board	1	498
10	Drain Valve	1	498
11A	Inlet Fill Valve and Water Feed System for unit with fill valve contained within housing	1	498
11B	Inlet Fill Valve and Water Feed System for unit with fill valve inlet extending from bottom of housing	1	530
12	Drain Cup Assembly	1	498
13	Front Panel and Screw	1	498
14	Electrical Access Panel and Screw	1	498
15	Safety Interlock Switch	1	498
16	Fill Cup and Hoses	1	498
17	Fill Cup Cap	1	499
18	Steam Dispersion Tube and Screws	1	499
19A	Automatic Digital Control	1	62
19B	Digital Manual Control (Wall Mounted)	1	65
20	Steam Canister and O-Ring	6	80
21	Transformer terminal block for unit with fill valve inlet extending from bottom of housing.	1	530
22	O-Ring for Steam Canister	6	525
	OTHER PARTS		
	Fan Pack	4	850
	Saddle Valve	1	400
	Drain Trap Assembly	1	402
	Manual Humidistat and Blower Activation Relay	1	499
	Airflow Proving Switch	1	459
	High Humidity Limit Switch	1	459
	Condensate Pump (Rated for 160°F)	1	485
	Steam Hose (6ft) and Clamps	1	497
	Drain Hose (10 ft.) and Clamps	1	4974