

# GMVM97 (B) / GCVM97 (B)

Contents

HEATING INPUT: 60,000-120,000 BTU/H







# MODULATING, VARIABLE-SPEED ECM GAS FURNACE 97% AFUE

0	
Nomenclature	2
Product Specifications	3
Dimensions	4
Airflow Specifications	6

#### Standard Features

- Integrated communicating ComfortBridge<sup>™</sup> Technology
- Commissioning and diagnostics via on board Bluetooth with the CoolCloud phone and tablet application
- Heavy-duty aluminized-steel tubular heat exchanger
- Stainless-steel secondary heat exchanger
- Self-calibrating modulating gas valve auto-configure for each installation
- Durable Silicon Nitride igniter
- Quiet variable-speed induced draft blower
- Self-diagnostic control board with constant memory fault code history output to a dual 7-segment display
- Color-coded low-voltage terminals with provisions for electronic air cleaner
- Efficient and quiet variable-speed airflow system gently ramps up or down according to heating or cooling demand
- Multiple continuous fan speed options offer quiet air circulation
- Auto-Comfort and enhanced dehumidification modes available
- All models comply with California 40 ng/J Low NOx emissions standard
- Can not be installed in California's South Coast Air Quality Management District (SCAQMD) and San Joaquin Valley Air Pollution Control District (SJVAPCD).
- AHRI Certified; ETL Listed



ENERGY STAR® and the ENERGY STAR mark are registered trademarks owned by the U.S. Environmental Protection Agency. ENERGY STAR products are third-party certified by an EPA-recognized Certification Body. Products that earn the ENERGY STAR prevent greenhouse gas emissions by meeting strict energy efficiency guidelines set by the U.S. Environmental Protection Agency.

#### **Cabinet Features**

- Designed for multi-position installation GMVM97: upflow, horizontal left or right GCVM97: downflow, horizontal left or right
- Certified for direct vent (2-pipe) or non-direct vent (1-pipe)
- Easy-to-install top venting with optional side venting
- Convenient left or right connection for gas and electrical service
- Cabinet air leakage (QLeak) ≤ 2%
- Heavy-gauge steel cabinet with durable finish
- Fully insulated heat exchanger and blower section
- Airtight solid bottom or side return with easy-cut tabs for effortless removal in bottom air-inlet applications

LIFETIME HEAT EXCHANGER










COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV GI = ISO 9001 = COMPANY WITH
ENVIRONMENTAL SYSTEM
CERTIFIED BY DNV GL
= ISO 14001 =



\* Complete warranty details available from your local dealer or at www.goodmanmfg.com. To receive the Lifetime Heat Exchanger Limited Warranty (good for as long as you own your home), 10-4ver Unit Replacement Limited Warranty and 10-vear Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration is not required in California or Québec.

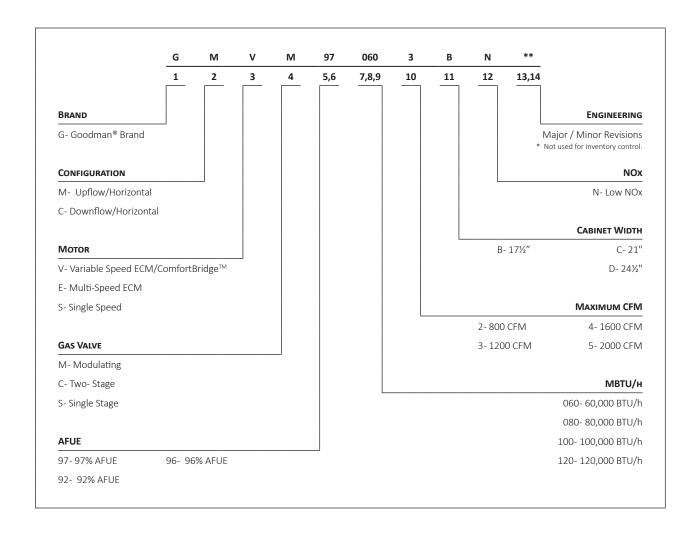

	GMVM97 0603BNB	GMVM97 0803BNB	GMVM97 0804CNB	GMVM97 1005CNB	GMVM97 1205DNB	GCVM97 0603BNB	GCVM97 0803BNB	GCVM97 0804CNB	GCVM97 1005CNB
HEATING DATA									
High Fire Input <sup>1</sup>	60,000	80,000	80,000	100,000	120,000	60,000	80,000	80,000	100,000
High Fire Output <sup>1</sup>	58,800	77,600	78,400	97,000	116,400	58,200	77,600	77,600	97,000
Low-Fire Steady-State Input <sup>1</sup>	30,000	40,000	40,000	50,000	60,000	30,000	40,000	40,000	50,000
Low-Fire Steady-State Output <sup>1</sup>	29,400	38,800	39,200	48,500	58,200	29,100	38,800	38,800	48,500
AFUE <sup>2</sup>	97	97	97	97	97	97	97	97	97
Temperature Rise Range (°F)	35- 65	30- 60	25-55	35-65	35-65	35-65	35-65	35-65	35- 65
Vent Diameter³	2"- 3"	2"- 3"	2"- 3"	2"- 3"	2"- 3"	2"- 3"	2"- 3"	2"- 3"	2"- 3"
No. of Burners	3	4	4	5	6	3	4	4	5
CIRCULATOR BLOWER									
Available AC @ 0.5" ESP	1.5-3	1.5-3	1.5-4	2-5	2-5	1.5-3	1.5-3	1.5-4	2-5
Size (D x W)	11" x 8"	11" x 8"	11" x 10"	11" x 10"	11" x 11"	11" x 8"	11" x 8"	11" x 10"	11" x 10"
Horsepower @ 1075 RPM	1/2	1/2	3/4	1	1	1/2	1/2	3/4	1
Speed	VS ECM								
ELECTRICAL DATA									
Min. Circuit Ampacity <sup>4</sup>	8.8	8.8	11.6	15.4	15.4	8.8	8.8	11.6	15.4
Max. Overcurrent Device (amps) <sup>5</sup>	15	15	15	20	20	15	15	15	20
SHIPPING WEIGHT (LBS)	118	121	142	144	157	117	122	144	146

Natural Gas BTU/h

#### Notes


- All furnaces are manufactured for use on 115 VAC, 60 Hz, single-phase electrical supply.
- Gas Service Connection ½" FPT
- Important: Size fuses and wires properly and make electrical connections in accordance with the National Electrical Code and/or all existing local codes.
- For bottom return: Failure to unfold flanges may reduce airflow by up to 18%. This could result in performance and noise issues.
- For servicing or cleaning, a 24" front clearance is required. Unit connections (electrical, flue and drain) may necessitate greater clearances than the minimum clearances listed above. In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.

<sup>&</sup>lt;sup>2</sup> DOE AFUE based upon Isolated Combustion System (ICS)

Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run and installation (1 or 2 pipes). The optional Combustion Air Pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.

<sup>4</sup> Minimum Circuit Ampacity = (1.25 x Circulator Blower Amps) + ID Blower amps. Wire size should be determined in accordance with National Electrical Codes. Extensive wire runs will require larger wire sizes

<sup>5</sup> Maximum Overcurrent Protection Device refers to maximum recommended fuse or circuit breaker size. May use fuses or HACR-type circuit breakers of the same size as noted.

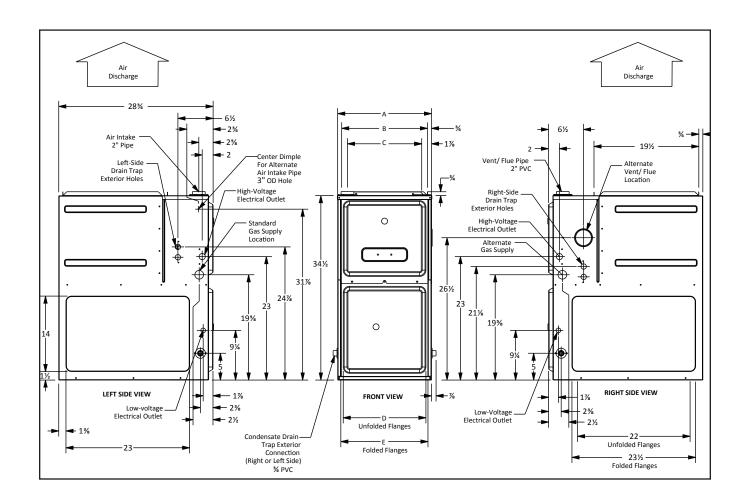


Model	W	D	Н
GMVM970603BNB	17½"	28%"	34½"
GMVM970803BNB	17½"	281/8"	34½"
GMVM970804CNB	21"	28%"	34½"
GMVM971005CNB	21"	28%"	34½"
GMVM971205DNB	24½"	28%"	34½"

	AIR DISCHARGE			AIR RETURN
Α	В	С	D	E
17½"	16"	13%"	12%"	13%"
17½"	16"	13%"	12%"	13%"
21"	19%"	17%"	16"	17½"
21"	19%"	17%"	16"	17½"
24½"	23"	20%"	19¾"	20%"

# MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

Position	SIDES	REAR	FRONT	Воттом	FLUE	ТОР
Upflow	0"	0"	3"	С	0"	1"
Horizontal	6"	0"	3"	С	0"	6"

C = If placed on combustible floor, the floor MUST be wood ONLY.

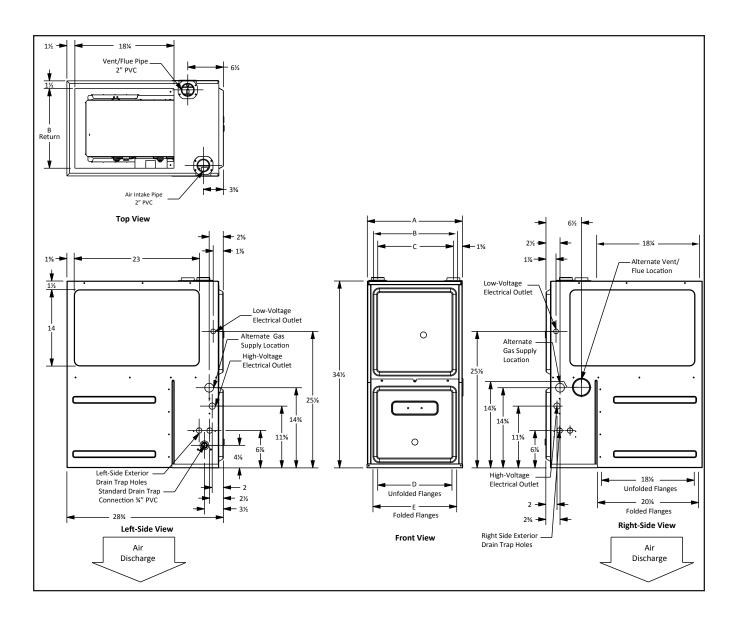

MODEL	W	D	Н
GCVM970603BNB	17½"	28%"	34½"
GCVM970803BNB	17½"	28%"	34½"
GCVM970804CNB	21"	28%"	34½"
GCVM971005CNB	21"	28%"	34½"

	AIR RETURN			AIR DISCHARGE
A	В	С	D	E
17½"	14%"	14"	14½"	13%"
17½"	14%"	14"	14½"	13%"
21"	181/8"	17½"	18"	19%"
21"	18%"	17½"	18"	19½"

# MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

Position	SIDES	REAR	FRONT	Воттом	FLUE	ТОР
Downflow	0"	0"	3"	NC	0"	1"
Horizontal	6"	0"	3"	С	0"	6"

C = If placed on combustible floor, the floor MUST be wood ONLY.

NC = For installation on non-combustible floors only. A combustible floor sub-base must be used for installations on combustible flooring.

MODEL/TEMP RISE RANGE (MID RISE)	0603	/M97 BNB* 5 (50)	0803	/M97 BNB* ) (45)		/M97 CNB* 5 (40)		/M97 CNB* 5 (50)	1205	/M97 DNB* 5 (50)
	CFM	RISE								
Recommended cfm for 100% firing rate & expected temperature rise	1080	50	1440	50	1760	41	1780	50	1950	55
Lowest recommended cfm for 100% firing rate & expected temperature rise	840	65	1200	60	1320	55	1380	65	1670	65
Maximum cfm for 100% firing rate & expected temperature rise	1400	39	1650	44	1760	41	2200	41	2200	49

NOTE: Low Heat CFM = High Heat CFM X .7. Low Heat Temperature Rise Is Expected to Equal High Heat Temperature Rise  $\pm$  5% 0140F02402-A

# GMVM970603BNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
1.5	600	420
2	800	560
2.5	1000	700
3	1200	840
MAX	1,400	

# GMVM970804CNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
2	800	560
2.5	1000	700
3	1200	840
4	1600	1120
MAX	1,760	

### GMVM971205DNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	High-Stage	LOW-STAGE CFM
2	800	560
3	1200	840
4	1600	1120
5	2000	1400
MAX	2,200	

GMVM970803BNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
1.5	600	420
2	800	560
2.5	1000	700
3	1200	840
MAX	1,650	

#### GMVM971005CNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
2	800	560
3	1200	840
4	1600	1120
5	2000	1400
MAX	2,200	

All furnaces ship as high speed for cooling. Installer must adjust blower speed as needed.

For most jobs, about 400 CFM per ton when cooling is desirable.

 $Do \ not \ operate \ above \ .5'' \ w.c. \ ESP \ in \ heating \ mode. \ Operating \ CFM \ between \ .5'' \ and \ .8'' \ w.c. \ is \ tabulated \ for \ cooling \ purposes \ only.$ 

#### MINIMUM FILTER SIZES

	GMVM97	GMVM97	GMVM97	GMVM97	GMVM97
	0603BNB	0803BNB	0804CNB	1005CNB	1205DNB
Filter Sizes (in²) (Qty)	(1) 16	(1) 16 x 25 (side or bottom)		(1) 20 x 25 or (2) 16 x	,

Note: Other size filters of equal or greater dimensions may be used. Filters may also be centrally located.

MODEL/TEMP RISE RANGE (MID RISE)	GCVM97 0603BNB* 35-65 (50)		* 0803BNB*		GCVM97 0804CNB* 35-65 (50)		GCVM97 1005CNB* 35-65 (50)	
	CFM	RISE	CFM	RISE	CFM	RISE	CFM	RISE
Recommended cfm for 100% firing rate & expected temperature rise	1080	50	1440	50	1430	50	1800	50
Lowest recommended cfm for 100% firing rate & expected temperature rise	830	65	1100	65	1100	65	1380	65
Maximum cfm for 100% firing rate & expected temperature rise	1400	38	1550	46	1760	41	2200	41

NOTE: Low Heat CFM = High Heat CFM X .7. Low Heat Temperature Rise Is Expected to Equal High Heat Temperature Rise  $\pm$  5% 0140F02402-A

#### GCVM970603BNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	High-Stage	LOW-STAGE CFM
1.5	600	420
2	800	560
2.5	1000	700
3	1200	840
MAX	1,400	

#### GCVM970803BNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
1.5	600	420
2	800	560
2.5	1000	700
3	1200	840
MAX	1,650	

#### GCVM970804CNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
2	800	560
2.5	1000	700
3	1200	840
4	1600	1120
MAX	1,760	

#### GCVM971005CNB\* COOLING SPEED ( @ .1" - .8" w.c. ESP)

Tons	HIGH-STAGE	LOW-STAGE CFM
2	800	560
3	1200	840
4	1600	1120
5	2000	1400
MAX	2,200	

All furnaces ship as high speed for cooling. Installer must adjust blower speed as needed.


For most jobs, about 400 CFM per ton when cooling is desirable.

Do not operate above .5'' w.c. ESP in heating mode. Operating CFM between .5'' and .8'' w.c. is tabulated for cooling purposes only.

# MINIMUM FILTER SIZES

	GCVM97	GCVM97	GCVM97	GCVM97
	0603BNB	0803BNB	0804CNB	1005CNB
Filter Sizes (in²) (Qty)	(1)	(2) 10 x 20 or 16 x 25 (top retu	rn)	(2) 14 x 20 or (1) 20 x 25 (top return)


Note: Other size filters of equal or greater dimensions may be used. Filters may also be centrally located.

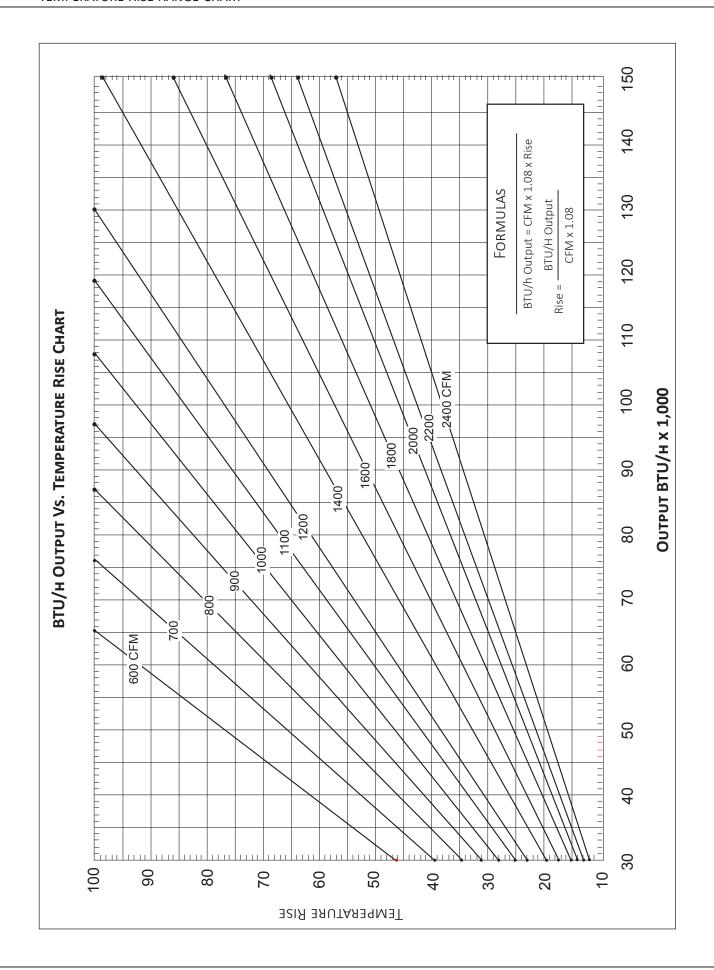







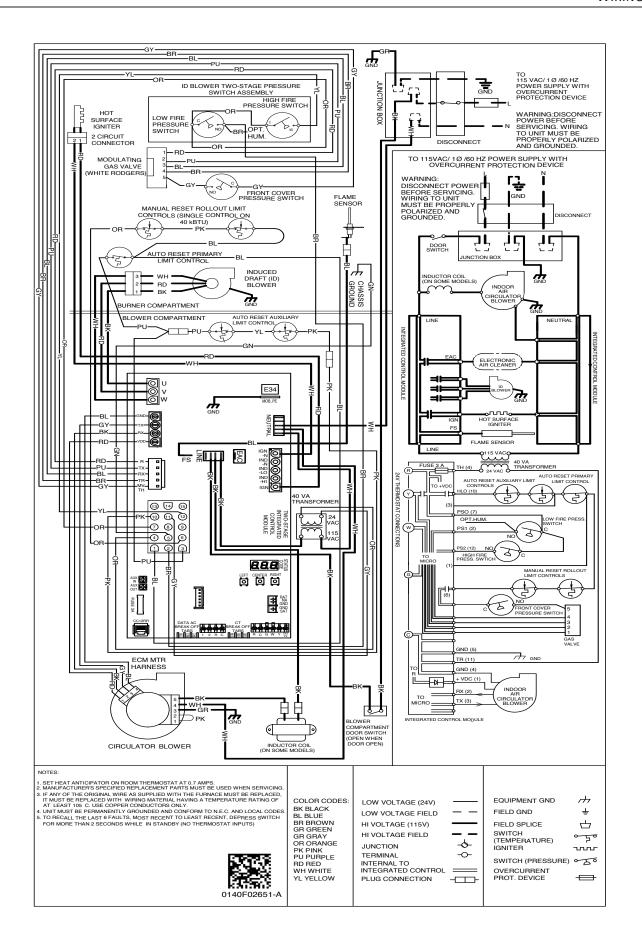

MODEL	DESCRIPTION	GMVM97 0603BNB	GMVM97 0803BNB	GMVM97 0804CNB	GMVM97 1005CNB	GMVM97 1205DNB
72950	Concentric Vent Kit (2")	٧	٧	٧	٧	_
72951	Concentric Vent Kit (3")	٧	٧	٧	٧	٧
RF000142	Drain Kit Horizontal Left Vertical Flue	٧	٧	٧	٧	٧
EFR02	External Filter Rack with 16"x25" Permanent Filter	٧	٧	٧	٧	٧
0170K00000S	Flush Mount Vent Kit- 3" or 2"	٧	٧	٧	٧	٧
0170K00001S	Flush Mount Vent Kit- 2"	٧	٧	٧	٧	_
AFE18-60A	Fossil Fuel (Dual Fuel) Kit	٧	٧	٧	٧	٧
HAMFK-01	High-Altitude Kit	٧	٧	٧	٧	٧
0270F05404	Horizontal Drain Tubing Kit	٧	٧	٧	٧	٧
LPLP04	Low LP Gas Pressure Switch	٧	٧	٧	٧	√
LPM-10	LP Conversion Kits	٧	٧	٧	٧	V

#### Notes

- Indicates available for this model
   For installation in Canada, gas furnaces are certified only to 4,500'.

Model	DESCRIPTION	GCVM97 0603BNB	GCVM97 0803BNB	GCVM97 0804CNB	GCVM97 1005CNB
72950	Concentric Vent Kit (2")	٧	٧	٧	٧
72951	Concentric Vent Kit (3")	٧	٧	٧	٧
CFSB17	Downflow Sub-Base 17.5"	٧	٧	_	_
CFSB21	Downflow Sub-Base 21"	_	_	٧	٧
0170K00000S	Flush Mount Vent Kit- 3" or 2"	٧	٧	٧	٧
0170K00001S	Flush Mount Vent Kit- 2"	٧	٧	٧	٧
AFE18-60A	Fossil Fuel (Dual Fuel) Kit	٧	٧	٧	٧
HAMFK-01	High-Altitude Kit	٧	٧	٧	٧
0270F05405	Horizontal Drain Tubing Kit	٧	٧	٧	٧
LPLP04	Low LP Gas Pressure Switch	٧	٧	٧	٧
LPM-10	LP Conversion Kits	٧	٧	٧	٧

# Notes

- Indicates available for this modelFor installation in Canada, gas furnaces are certified only to 4,500'.

11

Notes	