



TP-N-621

VIVE Comfort

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 1-800-776-1635 **Web:** www.vivecomfort.com

Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
More Information	4
Warranty Registration	5




Caution:

Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

Getting to know your thermostat

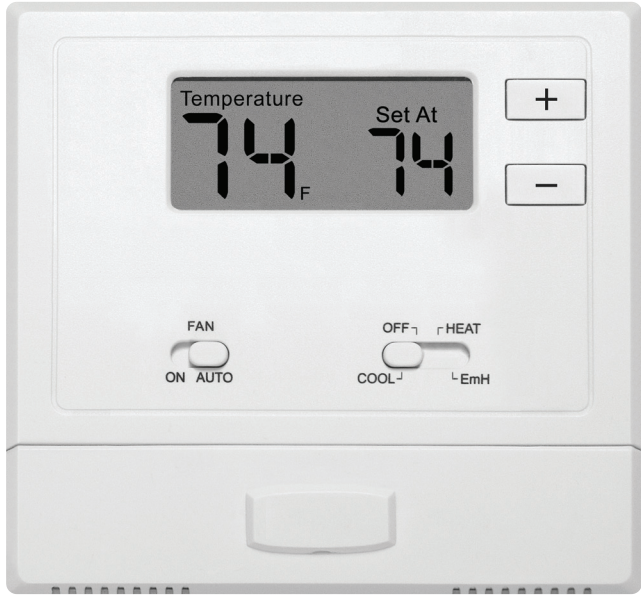

① LCD

Low Battery Indicator:
Replace batteries when indicator is shown.

System operation indicators: ON will display when the **COOL, HEAT** or **Emergency Heat** is on.

Indicates the current room temperature.

Displays the user selectable setpoint temperature.

+1 will appear in the display when the auxiliary heat is active.


- ② Fan Switch
- ③ System Switch
- ④ Easy Change Battery Door
- ⑤ Setpoint Buttons



Important:


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.

Battery door information

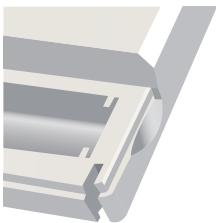

Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Insert 2 AA Alkaline batteries (included).

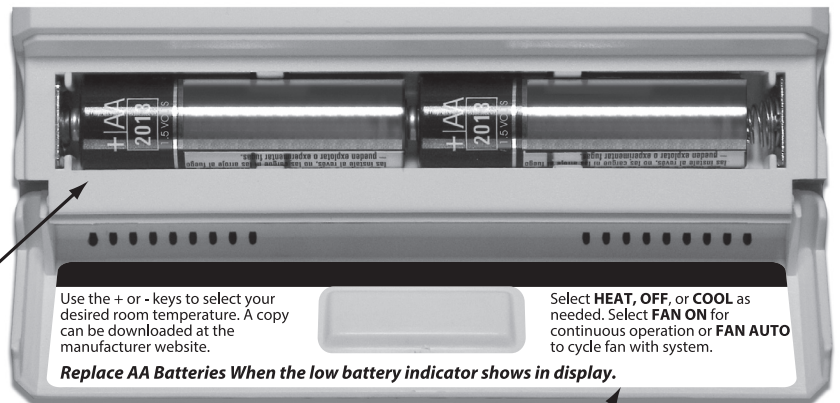


Use the + or - keys to select your desired room temperature. A copy can be downloaded at the manufacturer website.

Select **HEAT, OFF,** or **COOL** as needed. Select **FAN ON** for continuous operation or **FAN AUTO** to cycle fan with system.

Replace AA Batteries When the low battery indicator shows in display.


Simple operating instructions are found on the back of the battery door.

Easy to use controls

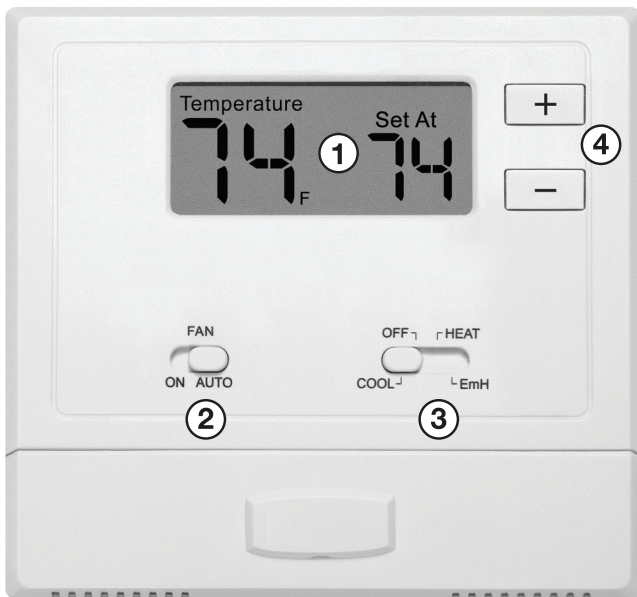

Caution:



When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① LCD Display:**
See page 2 for details about this display read out.
- ② Fan Switch:**
Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.
- ③ System Switch:**
Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. Selecting **EmH** locks out your compressor and turns on the secondary heat mode.
- ④ Temperature Setpoint Buttons:**
Press the or buttons to select the desired room temperature.

Understanding Thermostat Staging

Your thermostat will control two stages of heating. The thermostat will try to maintain your comfort setting using the first stage for energy efficiency. The second stage of heating will only be used if your thermostat cannot maintain your comfort setting using only one stage. When the second stage is used you will see **+1** in the display.

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website, select warranty registration and fill out a short registration form.
- or -
- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Thermostat Warranty Registration

1111 S. Glenstone

Suite 2-100

Springfield, MO 65804