Reducers




Description

- die stamped concentric reducers
- sizes greater than 14" will not be stamped

Ordering Example

Gasketed, G-3	<u>Type</u>	<u>[∞]d₁</u>	<u>∞d₂</u>
	RCG	aa	bb
Nongasketed, G-0	<u>Type</u>	^ø d₁	^Ø d₂
	RC	aa	bb

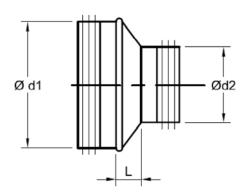

RCG/RCFG




13

Description

- die stamped concentric reducers
- ^ØD = duct size slips over fitting ends
- sizes greater than 14" will not be stamped

Ordering Example

Gasketed, G-3	<u>Type</u> RCFG	^Ø D aa	$\frac{^{\varnothing}d_{2}}{bb}$
Nongasketed, G-0	<u>Type</u> RCF	^Ø D aa	$\frac{^{\varnothing}d_{2}}{bb}$

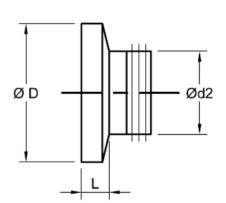



^Ø d₁	^Ø d₂	L ₁	L ₂
(in)	(in)	(in)	(in)
4	3	(in) ³ / ₄	(in) 2 ³ / ₈
5 5	3 4	1 7/8	2°/8
		⁷ / ₈	$2^{3}/_{8}$
6	3	1 ³ / ₄	3 ³ / ₈
6	4 5	1 ¹ / ₄	$2^{7}/_{8}$
6	5	3/4	$2^{3}/_{8}$
7	4	2	$3^{1}/_{2}$
7 7	5	$1^{1}/_{2}$	3
7	6	1	2'/2
8	4	2 ¹ / ₄	3 ³ / ₄
8	5	1 ⁵ / ₈	3 ¹ / ₄
8	6	1 ¹ / ₄	$2^{7}/_{8}$
8	7	1 ¹ / ₄	$2^{3}/_{8}$
9	6	1 ⁵ / ₈	$3^{1}/_{4}$
9	7	$2^{1}/_{8}$	$3^{3}/_{4}$
9	8	1 ¹ / ₈	$2^{3}/_{4}$
10	5	2 ⁵ / ₈	4 ¹ / ₄
10	6	$2^{1}/_{4}$	$3^{7}/_{8}$
10	7	1 ⁵ / ₈	$3^{1}/_{4}$
10	8	$1^{1}/_{8}$	$2^{3}/_{4}$
10	9	⁵ / ₈	2 ¹ / ₄

^Ø d₁	$^{\emptyset}d_{2}$	L ₁	L_2
(in)	(in)	(in)	(in)
12	8	$2^{1}/_{8}$	$3^{3}/_{4}$
12	9	1 ⁵ / ₈	$3^{1}/_{4}$
12	10	1 ¹ / ₈	$2^{3}/_{4}$
14	8	$3^{3}/_{8}$	$5^{3}/_{4}$
14	10	$2^{3}/_{8}$	$4^{3}/_{4}$
14	12	$1^{3}/_{8}$	$3^{5}/_{8}$
16	8	$3^{7}/_{8}$	$6^{1}/_{4}$
16	10	$2^{7}/_{8}$	$5^{1}/_{4}$
16	12	1 ⁷ / ₈	$4^{1}/_{4}$
16	14	7/8	$3^{1}/_{4}$
18	8	5	$8^{1}/_{8}$
18	10	4	$7^{1}/_{8}$
18	12	3	$6^{1}/_{8}$
18	14	2	5 ¹ / ₈
18	16	1	4 ¹ / ₈
20	8	6	9 ¹ / ₈
20	10	5	8 ¹ / ₈
20	12	4	$7^{1}/_{8}$
20	14	3	$6^{1}/_{8}$
20	16	2	5 ¹ / ₈
20	18	1	4 ¹ / ₈

