ACR SYSTEM FLUSH



- Ozone Safe
- Non-Toxic
- Non-Flammable
- User Friendly (See guidelines on back)
- Pre-conversion preparation and system burnouts.
- Cleans any ACR System Lines
- Convenient 5 and 10 lb cylinders
- Includes FREE Handy Shot Flushing Tool
- Free on-line training video at www.icorvtc.com




INTERNATIONAL "making your life easier™"


10640 E. 59th St. Indianapolis, IN 46236 800-497-6805

www.icorinternational.com


Clean Shot Guidelines

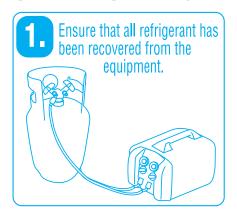


Disconnect the suction and liquid lines at the condenser and evaporator and crimp one end of both lines, leaving an opening to help build up pressure so flushing contaminates will be pushed out into a container.

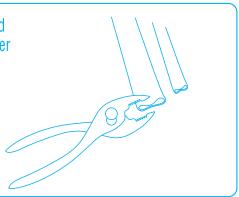


Insert the Handy Shot Fitting into the non-crimped end of the tubing. With the Clean Shot cylinder in the upright position start flushing the tubing for 30 to 90 seconds. (depending on the tubing size and length).

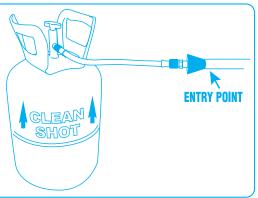


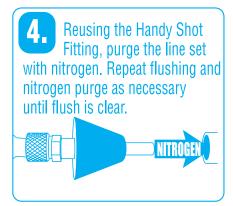


After flushing is completed, purge the tubing with approx.100 psig of nitrogen to push any remaining flush from the tubing

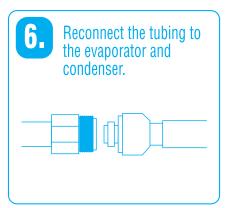



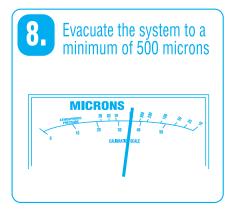

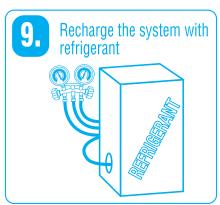

Adjust the refrigerant charge to designed sub cooling if the system is equipped with an expansion valve or compressor superheat if equipped with a fixed orifice or cap tube.

- Use in well ventilated area. Wear safety gloves and eye protection.
- Review system piping for low spots that may cause Clean Shot to puddle and leave contaminants in the system.
- Use the Handy Shot fitting to easily flush the line sets from 1/4 to 1 1/8 OD ACR pipe.
- Clean Shot is not recommended to flush compressors, TEV, filter driers, reversing valves, accumulators etc.
- When flushing evaporators and condensers with Clean Shot, they must be isolated from system to remove contaminates.
- Always read Clean Shot Safety Data Sheet before use.